



**TOOLS**

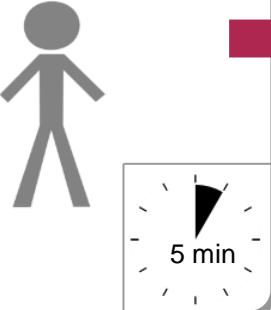

5 min


**PARTS**

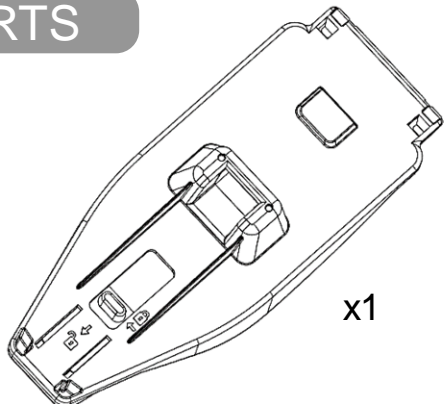

x1


**1**

Fit both hooks at front of unit

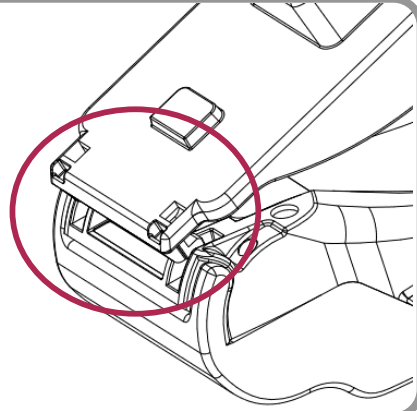

**3**

Rotate PEDPack down

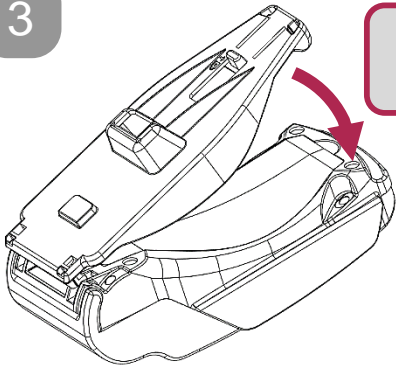


**4**

Push down at end and click in place


CLICK !!

CHECK - push slider upwards to line up with lock symbol to check locked

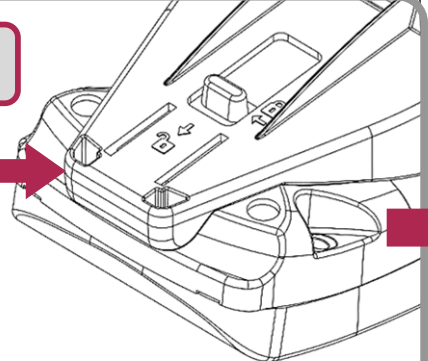

**5**

Fit PED onto plinth

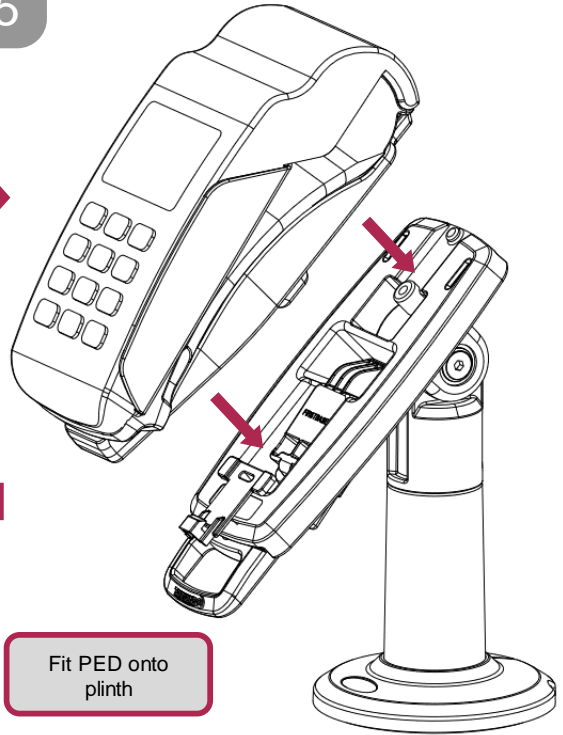


**6**

**OPTIONAL**

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.

GENERIC PED SHOWN

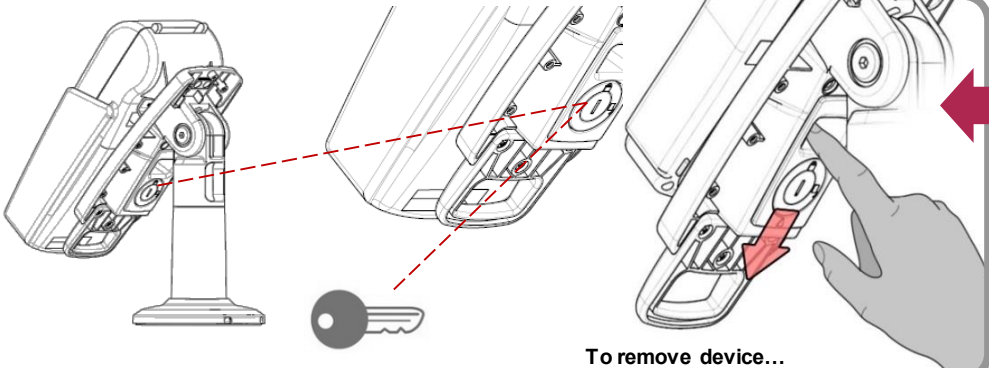

To remove device...