



**TOOLS**

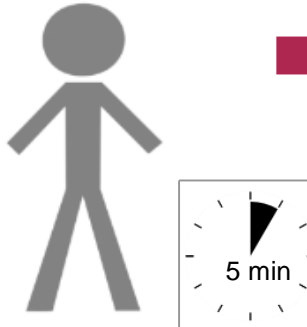


**PARTS**

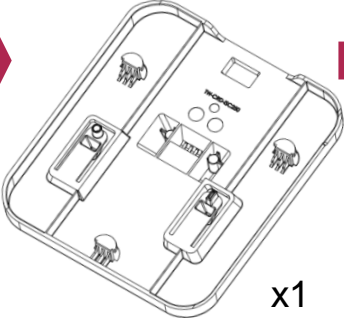

x1

**1**


Ensure 3 tabs on PEDPack line up with 3 semi circular holes in PED

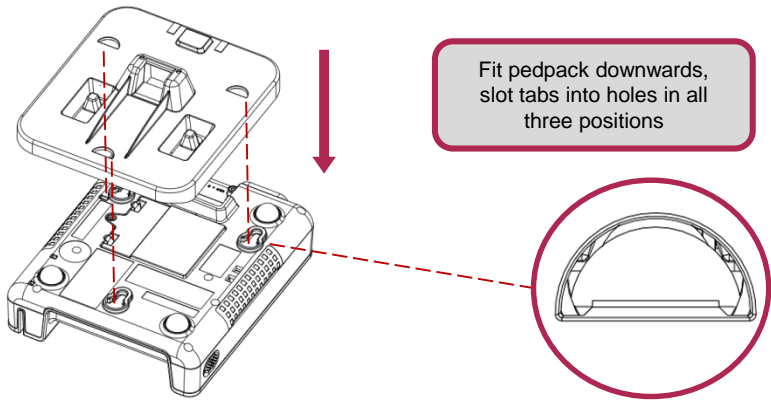

Fit pedpack downwards, slot tabs into holes in all three positions

**2**


Once tabs are slotted, push PEDPack upwards until tabs are captured in keyholes and both clips fully engage

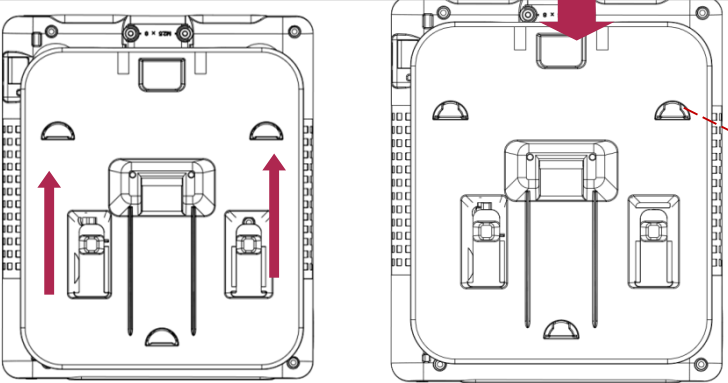

Check 3 tabs are captured and pedpack cannot be pulled upwards

**3**


When fitted onto plinth, two long clips secure and PEDPack cannot be pulled off PED.

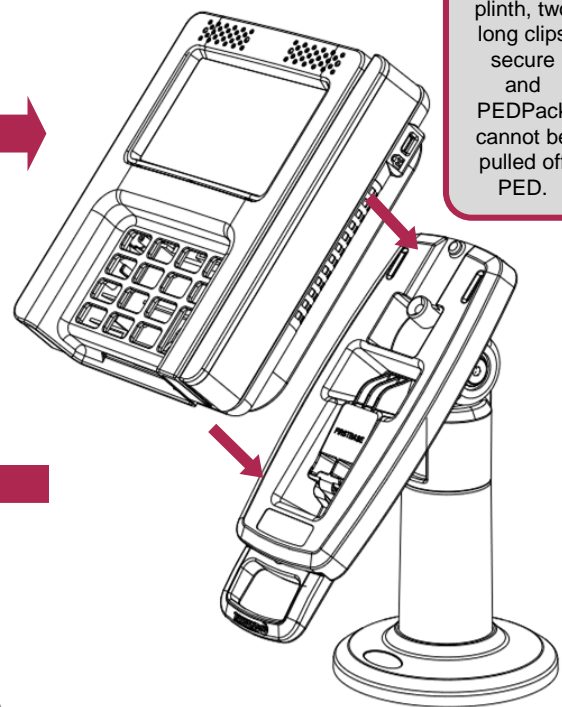

**4** GENERIC PED SHOWN

**OPTIONAL**

If locking device, turn key then remove to secure.  
To unlock, first ensure key fitted.

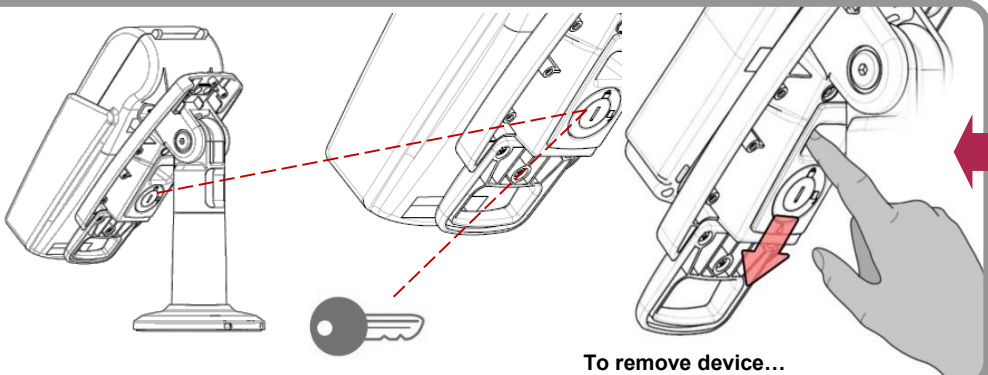

To remove device...